



Button Programming Instructions on a TDA / TDE / NCP Panasonic Telephone System

Speed Dial Button

Step 1: With the handset in the cradle, Press Program

Step 2: Press the button you want to program as One Touch Speed Dial button

Step 3: Dial 2 on the key pad

Step 4: Dial 9 then the telephone number you want to program as a speed dial

Step 5: Press the Auto Dial / Store button

Step 6: To exit programming, pickup the handset and hang it up

Extension DSS Button

Step 1: With the handset in the cradle, Press Program

Step 2: Press the button you want to program as an extension DSS button

Step 3: Dial 1 on the key pad

Step 4: Dial the extension number you want to assign to the button

Step 5: Press the Auto Dial / Store button

Step 6: To exit programming, pickup the handset and hang it up